


*fluxing unit for
cell connectors (ribbons)*

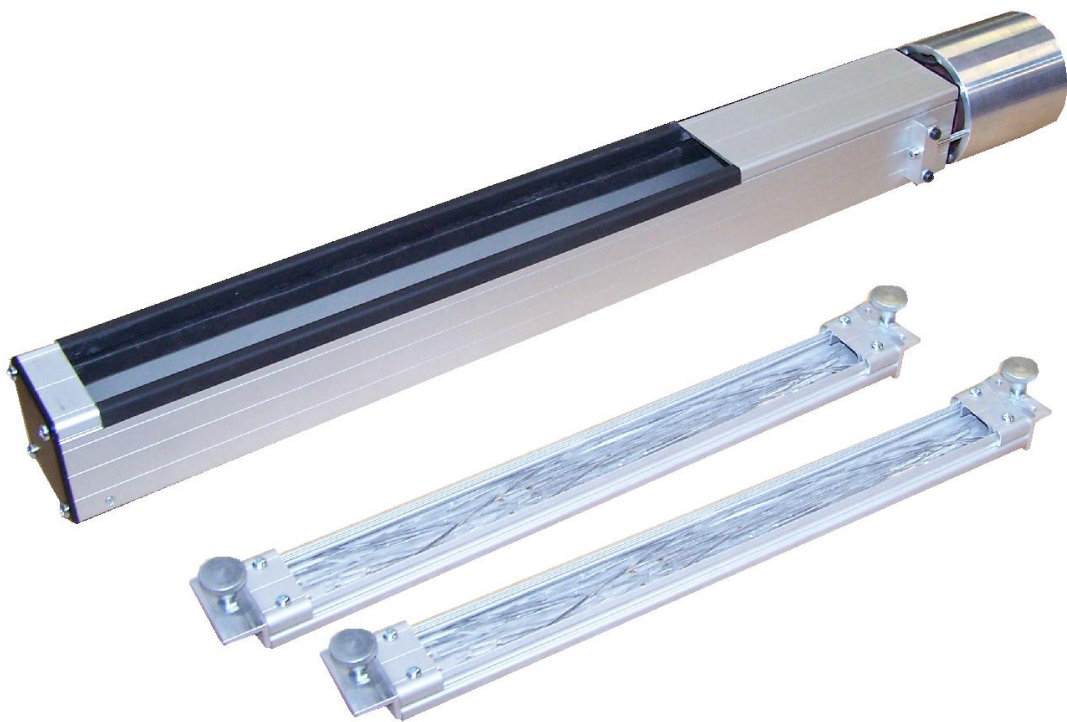

- *easy handling*
- *compact design*
- *equal drying*
- *high efficiency*

System Description

For fluxing the cell connectors are placed in a basket and dipped in a flux bath. After draining, the basket is placed on the dryer. Then dried with a constant 50 ° C on the heated air stream.

scope of supply

- 2 baskets
- dip tank
- hot air dryer
- 3 storage container

Technical Data

basket

dimensions (LxWxH) 360x40x20 mm

dip tank

dimensions (LxWxH) 420x60x30 mm

hot air dryer

dimensions (LxWxH) 660x60x75 mm

temperature 50°C

air flow 200 l/min

weight 1 kg

power consumption 230V / 50Hz; 250W

